


discover the *Alpine* difference

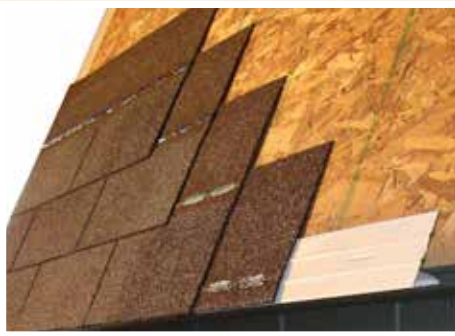

Aluminum Drip Edge

Added protection against rain, snow, and ice.



Smartside Soffit and Frieze Board

Standard on the Cabana, Cove, Frontier, Skyview, and Woodsman models; optional on other models.



Metal Truss Plates

Provides superior strength versus wooden gussets.



Double 2x8~ top-plate

On Alpine Barnstyles, the rafter is located on outer edge of 2x8" top-plate. Increases wall strength and provides more loft storage.



LP Smartside Trim

Standard on all buildings except barnsiding. Decay resistant, primed trim that is ready to face the outdoors.



Strongback Nailer

Computerized component saws cut each wall stud with a specialized notch. This allows us to install our 2x3" Strongback Nailer, resulting in straighter and stronger walls with more nailing surface for the siding panels.



warranty

We've been here since 1981 and we're committed to continue giving you complete satisfaction.

